




Mercedes Benz(E)Sprinter RWD + 4x4

167 KIT-OR Sidebars WB 4032

INSTALLATION GUIDE

STEPS

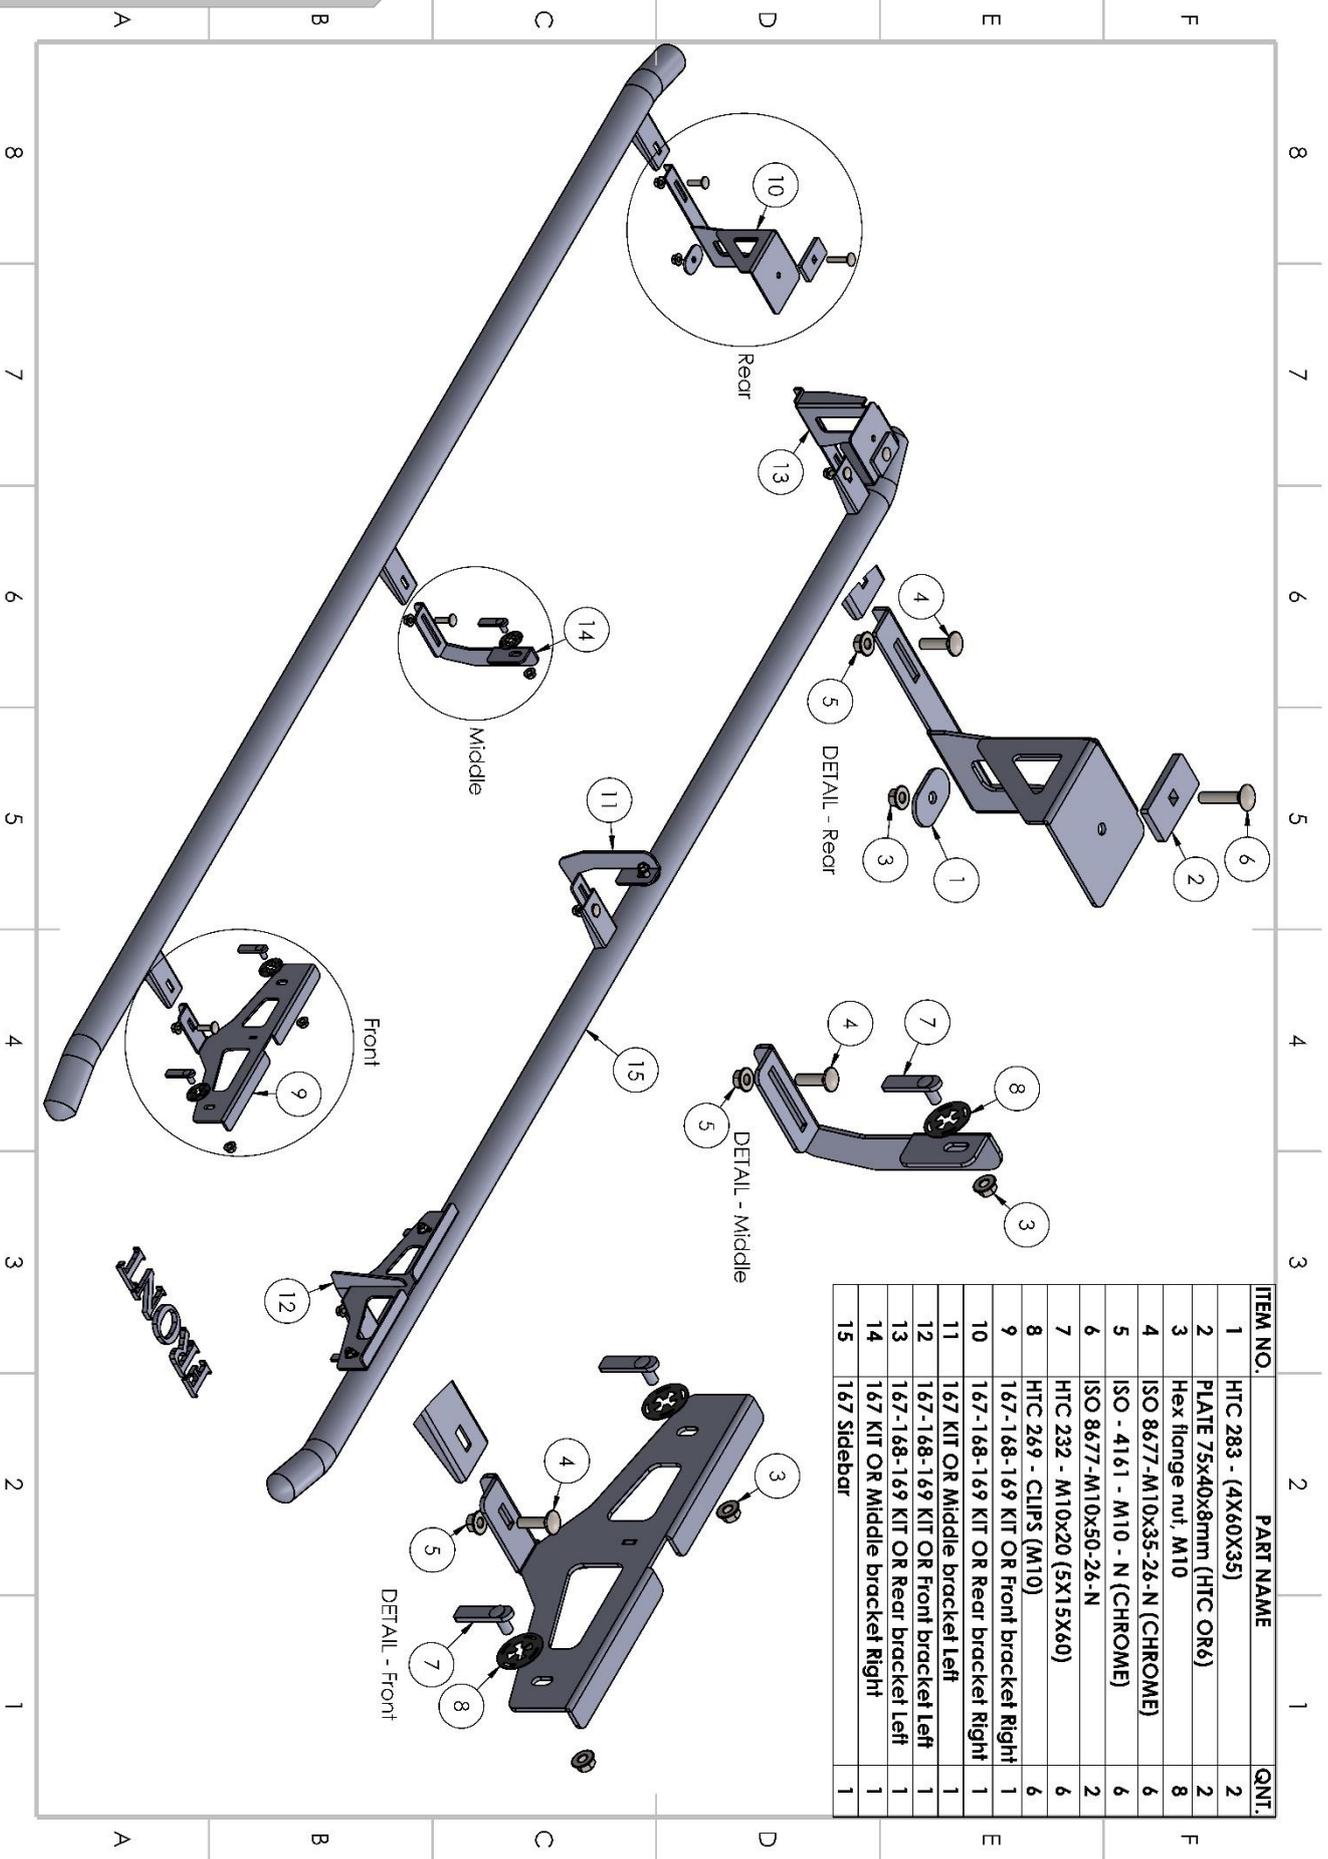

ITEM NO.	PART NAME	QNT.
1	HTC 283 - (4X60X35)	2
2	PLATE 75x40x8mm (HTC OR6)	2
3	Hex flange nut, M10	8
4	ISO 8677-M10x35-26-N (CHROME)	6
5	ISO - 4161 - M10 - N (CHROME)	6
6	ISO 8677-M10x50-26-N	2
7	HTC 232 - M10x20 (5X15X60)	6
8	HTC 269 - CLIPS (M10)	6
9	167-168-169 KIT OR Front bracket Right	1
10	167-168-169 KIT OR Rear bracket Right	1
11	167 KIT OR Middle bracket Left	1
12	167-168-169 KIT OR Front bracket Left	1
13	167-168-169 KIT OR Rear bracket Left	1
14	167 KIT OR Middle bracket Right	1
15	167 Sidebar	1

	A	B	C	D	E	F
1	<p>ITEM NO = 01</p> <p>HTC 283 - (4X60X35) (2X)</p>		<p>ITEM NO = 02</p> <p>PLATE 75x40x8mm (HTC OR6) (2X)</p>		<p>ITEM NO = 03</p> <p>Hex flange nut, M10 (8X)</p>	
2	<p>ITEM NO = 04</p> <p>ISO 8677-M10x35-26-N (CHROME) (6X)</p>		<p>ITEM NO = 05</p> <p>ISO - 4161 - M10 - N (CHROME) (6X)</p>		<p>ITEM NO = 06</p> <p>ISO 8677-M10x50-26-N (2X)</p>	
3	<p>ITEM NO = 07</p> <p>HTC 232 - M10x20 (6X)</p>		<p>ITEM NO = 08</p> <p>HTC 269 - CLIPS (M10) (6X)</p>		<p>ITEM NO = 09</p> <p>167-168-169 KIT OR Front bracket Right (1X)</p>	
4	<p>ITEM NO = 10</p> <p>167-168-169 KIT OR Rear bracket Right (1X)</p>		<p>ITEM NO = 11</p> <p>167 KIT OR Middle bracket Left (1X)</p>		<p>ITEM NO = 12</p> <p>167-168-169 KIT OR Front bracket Left (1X)</p>	
5	<p>ITEM NO = 13</p> <p>167-168-169 KIT OR Rear bracket Left (1X)</p>		<p>ITEM NO = 14</p> <p>167 KIT OR Middle bracket Right (1X)</p>		<p>ITEM NO = 15</p> <p>167 Sidebar (1X)</p>	
6						
7						
8						

Front Brackets > Use HTC's and nuts for connections.



Middle Brackets > Use HTC's , bolts and nuts for connections.



Rear Brackets > Use HTC's , bolts and nuts for connections.



