

- (GB) Fitting Instruction
- (NL) Montagevoorschrift
- (E) Instrucciones de montaje
- (S) Manual
- (D) Montageanleitung
- (F) Instructions de montage
- (I) schema di montaggio
- (RU) руководство по монтажу

BRAND : DACIARP

MODEL : DOKKER 2013+

PRODUCT : BB

CODE : 1714






PACKLISTE

NO	PART NAME	PART CODE	QTY
1	LEFT BRACKET	1712350FC-L	2
2	RIGHT BRACKET	1712350FC-R	2
3	LEFT BRACKET	1712350B-L	1
4	RIGHT BRACKET	1712350B-R	1
5	M10X30 S BOLT	DIN 243	6
6	M10 WASHER	DIN 125	6
7	M10 NUT	DIN 934	6
8	M6X30 BOLT	DIN 933	4
9	M6 WASHER	DIN 125	8
10	M6 NUT	DIN 934	4
11	10X25 FLANGE BOLT	DIN 6921	12
12	M10 FLANGE NUT	DIN 6923	12
13			
14			
15			
16			

GUIDE NO : MK0206
 REVISION NO : A
 FORM NO : MF003



TUV
 AUSTRALIA
 HELIX
 EN ISO 9001:2008

TUV
 CERT
 EN ISO 9001:2000

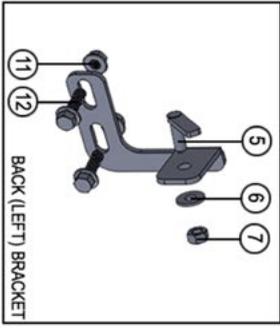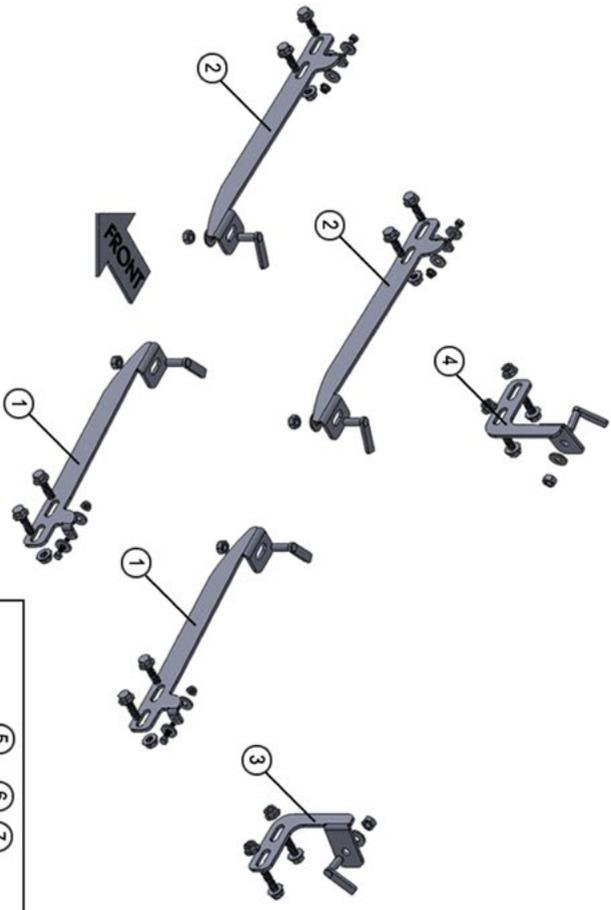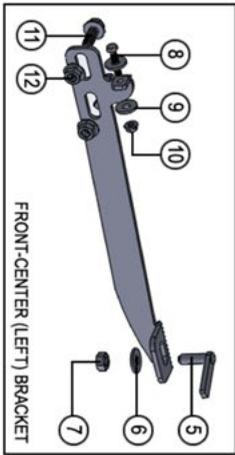
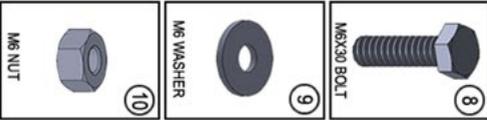
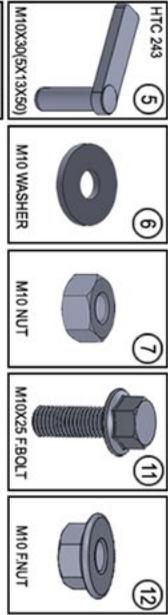




• The installation process of front left bracket is the same as the right one.

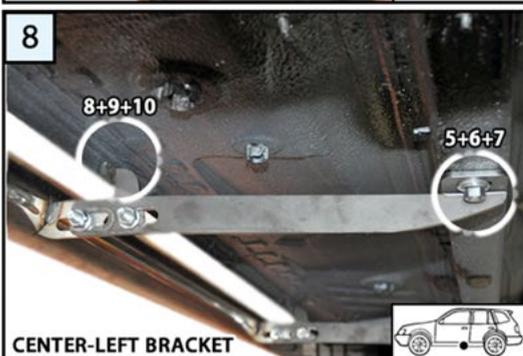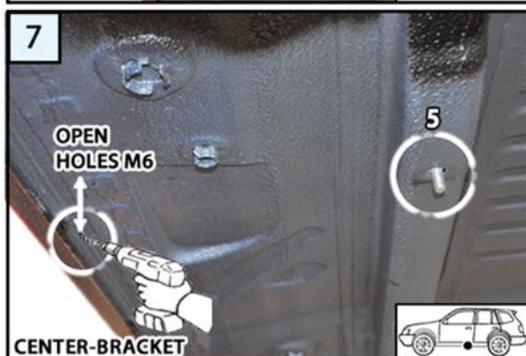

• The installation process of center left bracket is the same as the right one.

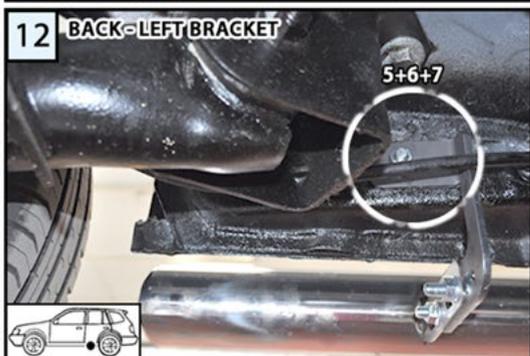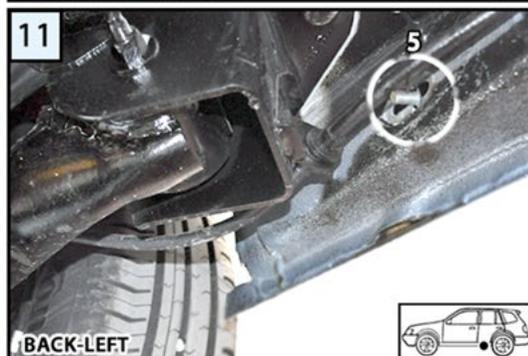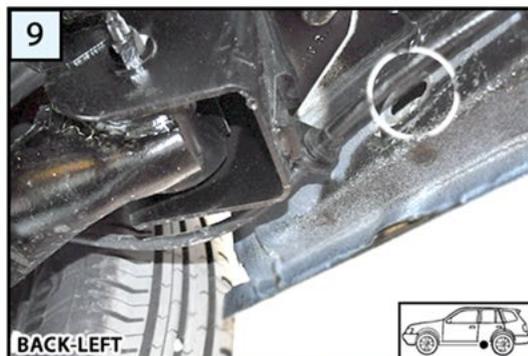

- The installation process of back left bracket is the same as the right one.