

Mounting instructions

Side bar series: GM - GC

eSprinter 2020+ (KL3A4)



SW13 (23 Nm)



SW17 (46 Nm)



45 Min.



All safety aspects according to the eSprinter, which can be consulted in the building guidelines, must be taken into account while mounting the side bars.

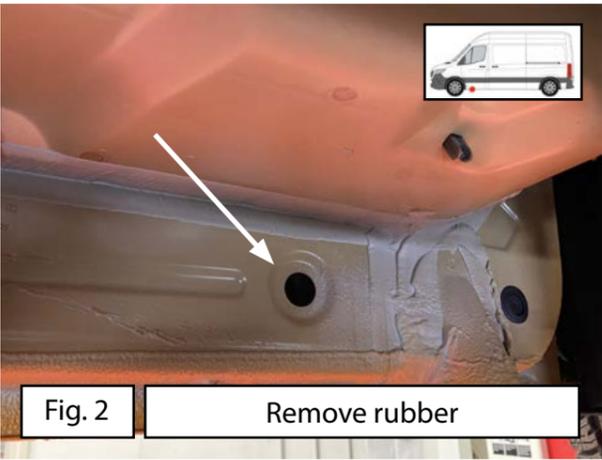


Fig. 2 Remove rubber

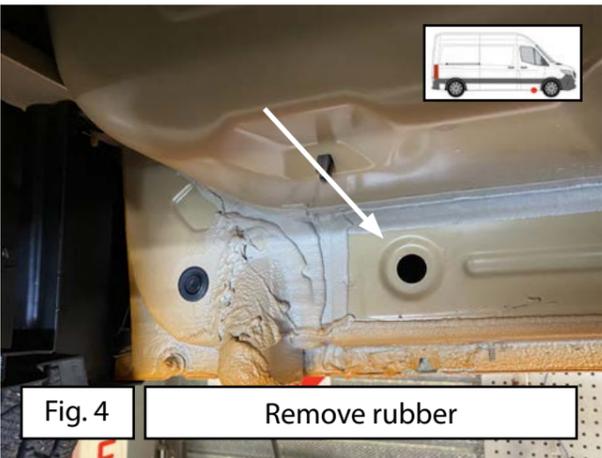


Fig. 4 Remove rubber



Fig. 6

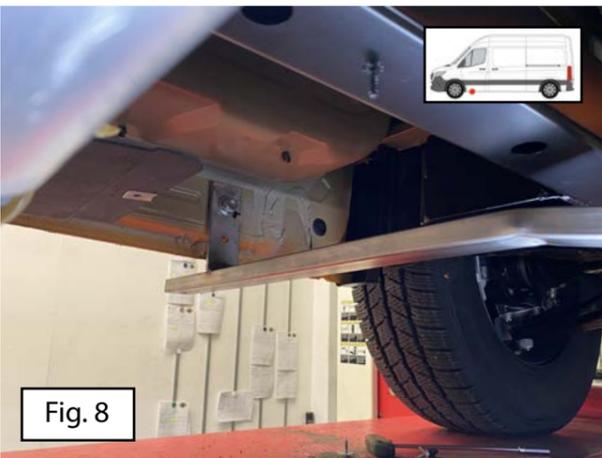


Fig. 8



Fig. 1 Remove protection



Fig. 3 Remove protection



Fig. 5



Fig. 7

88 KIT OR ASSEMBLY

ITEM NO.	PART NAME	QNT.
1	ISO 8678-M10X35-28-N (STAINLESS)	6
2	Washer DIN 125 - A 10.5 - 300HV	2
3	DIN 6905-11-FSt	2
4	Hexagon Flange Nut DIN 6923 - M10 - N	4
5	HTC 262 - M10X30(5X15X60)	2
6	HTC 269 - CLIPS (M10)	2
7	ISO - 4161 - M10 - N (STAINLESS)	4
8	PLATE 75x40x8mm (HTC OR6)	2
9	88 KIT OR FRONT	1
10	88 KIT OR REAR LEFT	1
11	88 KIT OR REAR RIGHT	1

