






**RENAULT MASTER LWB MWB**

**156-157-158 KIT AT(Z)**

**INSTRUCTION**


FRONT

ITEM NO.	PART NAME	QNT.
1	PLATE 75x40x8mm (HTC OR6)	8
2	HTC 283 - (4X60X35)	6
3	Hex Flange Nut DIN 6923 - M10 - N	14
4	DIN 6921 - M10 x 25 x 25 - N	4
5	156-157-158 KIT ATZ Center Right	1
6	156-157-158 KIT ATZ Front Right	1
7	156-157-158 KIT ATZ Rear Support Right	1
8	156-157-158 KIT ATZ Front Support Right	1
9	156-157-158 KIT ATZ Rear Support Right	1
10	156-157-158 KIT ATZ Front Support Left	1
11	156-157-158 KIT ATZ Rear Left	1
12	156-157-158 KIT ATZ Center Left	1
13	156-157-158 KIT ATZ Front Left	1
14	156-157-158 KIT ATZ Rear Support Left	1
16	HTC 238 - M10x25(4x20x60)	2
17	HTC 269 - Clips (M10)	2
18	M10X40 DIN 603	8

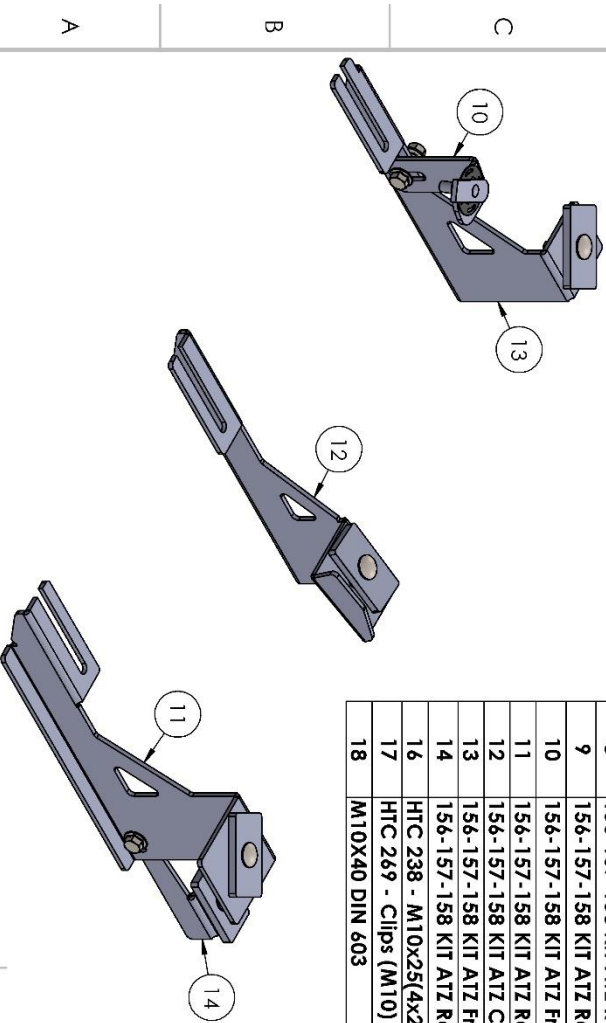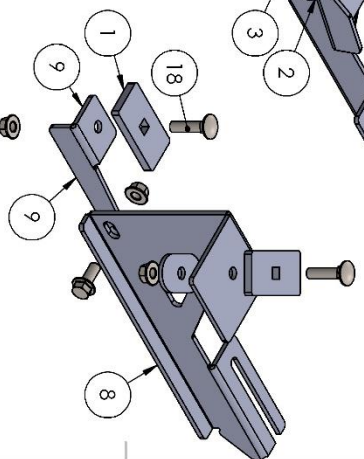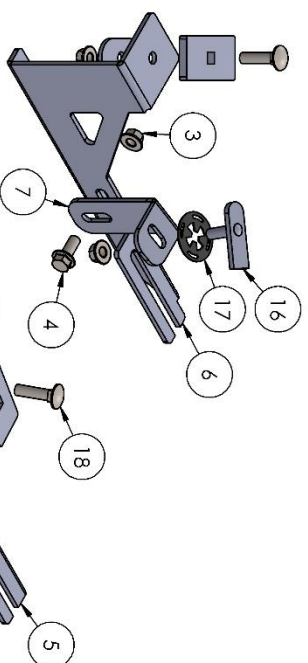


8 7 6 5 4 3 2 1


A B C D E F

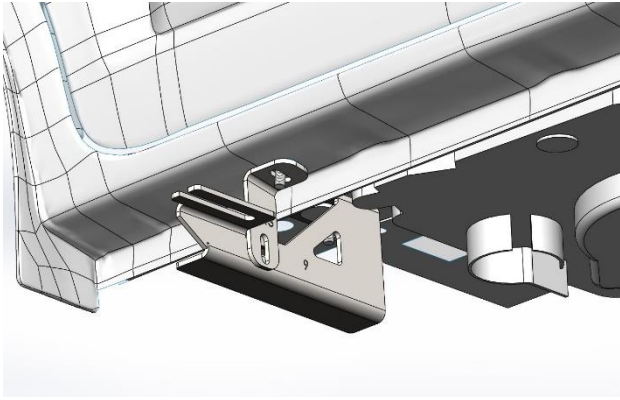


**FRONT LEFT**

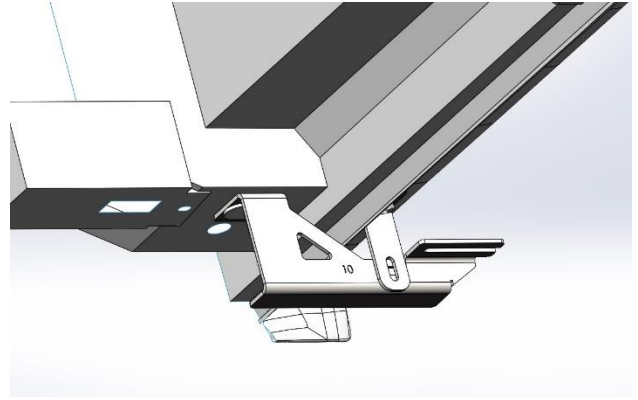


**FRONT RIGHT**

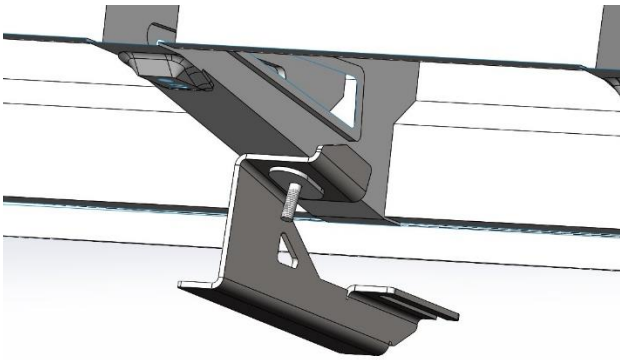


**MIDDLE LEFT**

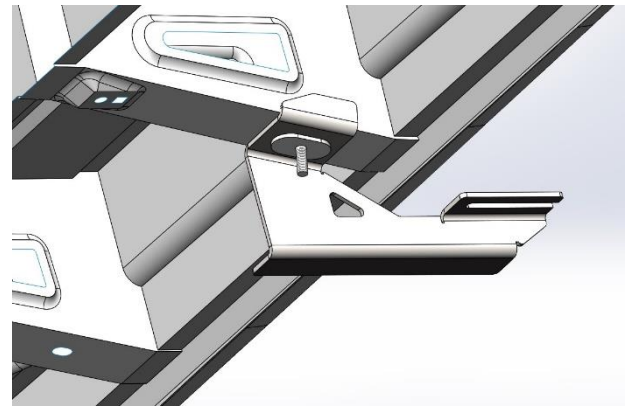

**MIDDLE RIGHT**

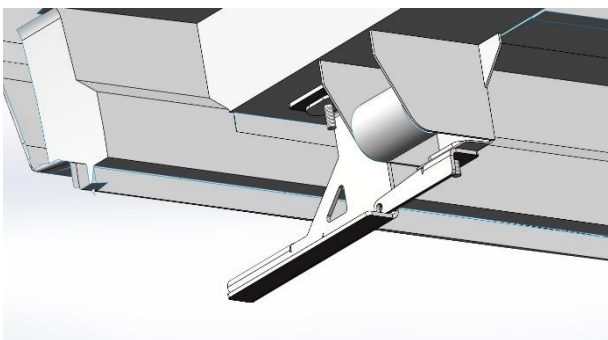

**REAR LEFT**

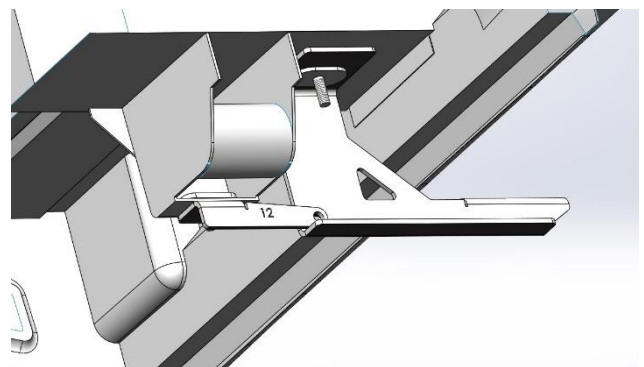

**REAR RIGHT**