


# Transit Custom Grille Fitting Instructions

---

## STEP 1

- You will receive in the box a mesh honeycomb grille. Like the images below.
- You Require to screw the words with the screws already provided in the packaging.

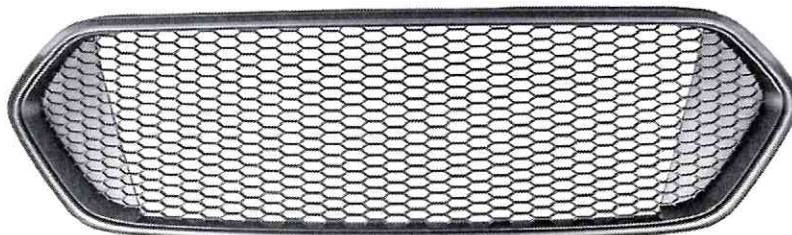


## STEP 2

- You require to put the "F" and "D" Letters first. Like Shown below.



## STEP 3

- After install "O" and "R" as they will find their place with no mistake.

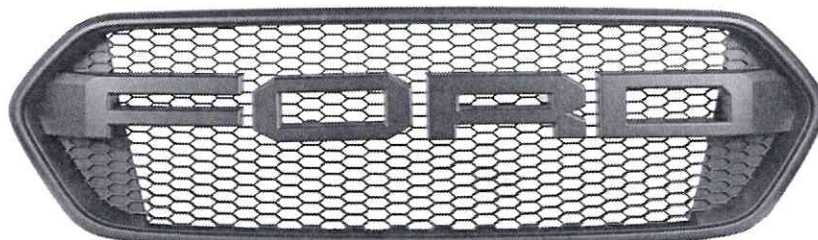

## STEP 4

- After fitting the words, now is time to fit the grille to the bumper.
- We recommend to pour hot/warm (not boiled) water all around the existing grille.
- The heat of the water will make the clips softer around the grille and easier to pull out.
- After pouring the hot water and you can see the bumper is nice and warm, you need to pull very firmly on either end towards the centre of the lower section. See image below.
- Pull out in one end and the rest will come out easily. Clear the clips and if you have hot water it will be handy as the new one will go in straight away.

